

Before installing and setting up the unit, make sure you have all of the accessories (→ Page 6 of Operating Instructions .)


Connect the power cords to an outlet after you have finished all of the connections.

STEP 1 Connecting to your TV, player, and other devices

Connecting to an ARC-compatible TV

Connect to your TV using an HDMI cable (commercially available).

Connect to the ARC HDMI input terminal on your TV.

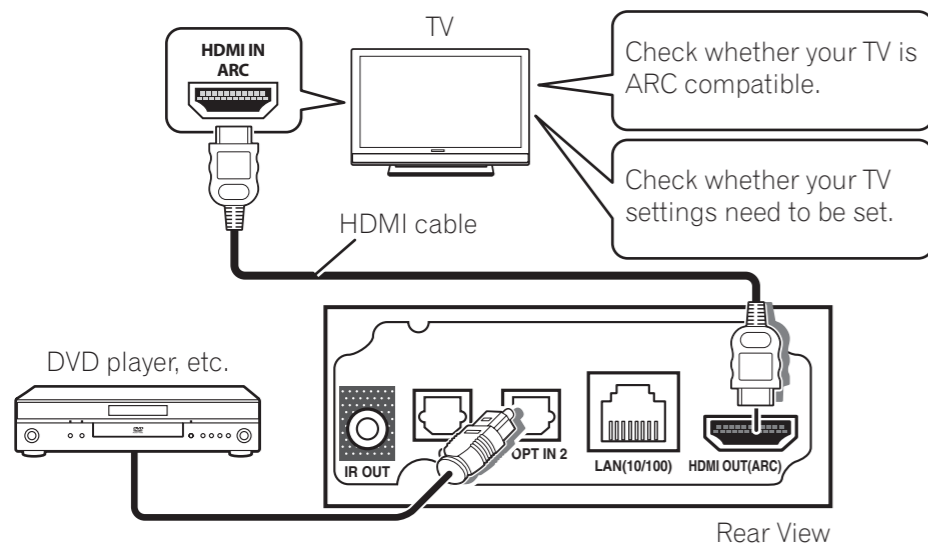


* **ARC (Audio Return Channel)**: This is a function that enables output of the TV audio from the unit by connecting only the HDMI cable.

Connecting to a TV that is not ARC compatible

Connect to your TV using an HDMI cable (commercially available).

To enable hearing of the TV audio with the unit, connect the supplied optical digital audio cable.

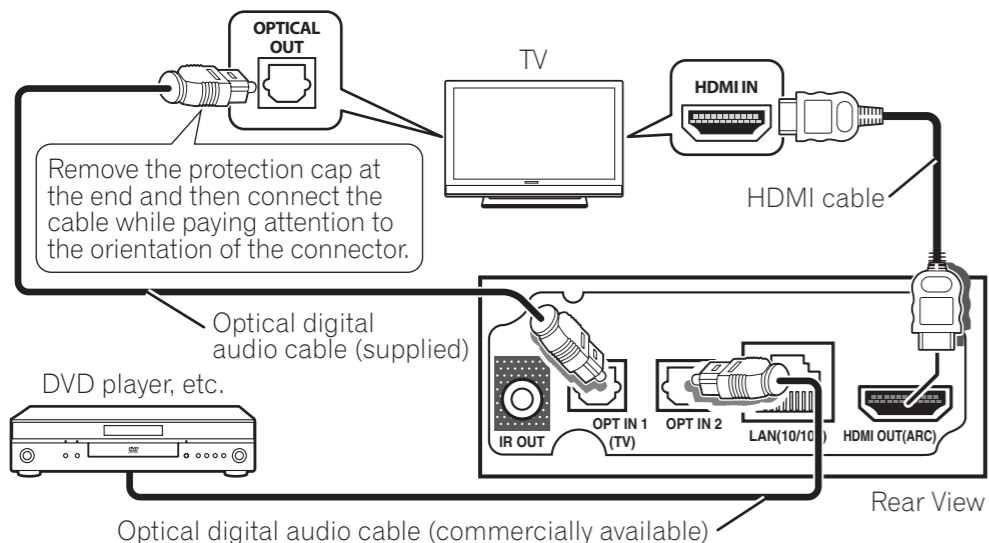

STEP 2 Connecting to the network


For details, refer to pages 21 to 23 of the Operating Instructions .

Connecting to the network via the LAN port

You can connect to a local area network (LAN) from the LAN port on the rear of the unit. For details, refer to the operating instructions for your network device.

Use a LAN cable to connect the LAN port of the unit to the LAN port of your modem or router.


For the LAN cable, use a straight cable with RJ45 connectors that is compliant with category 5 (CAT5) or higher.

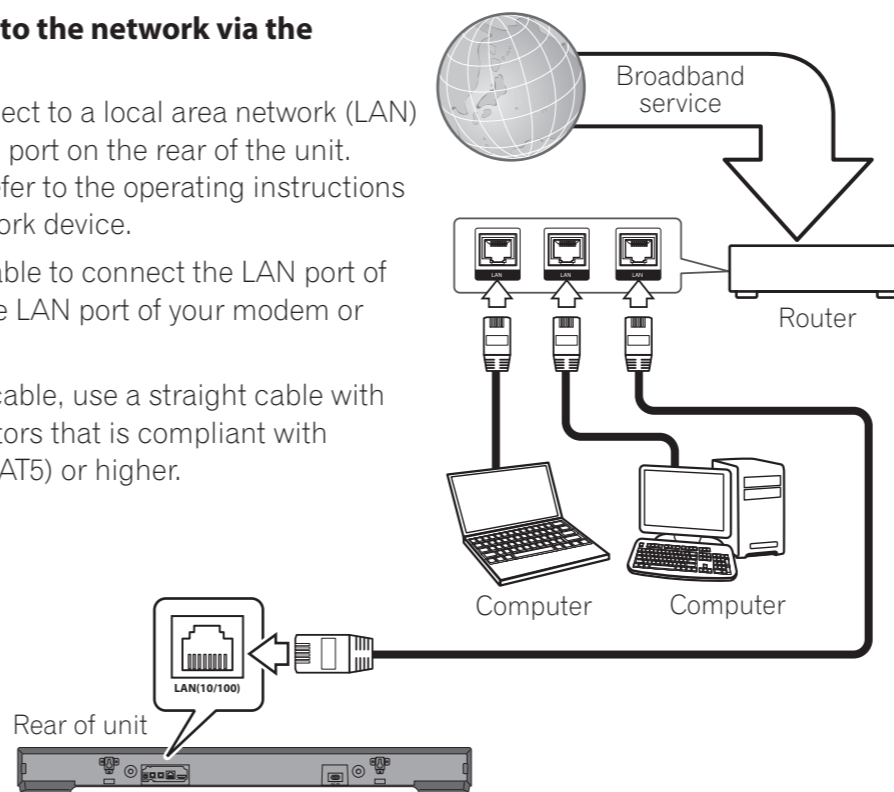

Connecting wirelessly

You can use an access point or wireless router to connect the unit to the network via a wireless LAN.

For details on connecting and the network settings, refer to the operating instructions for your access point or wireless router.

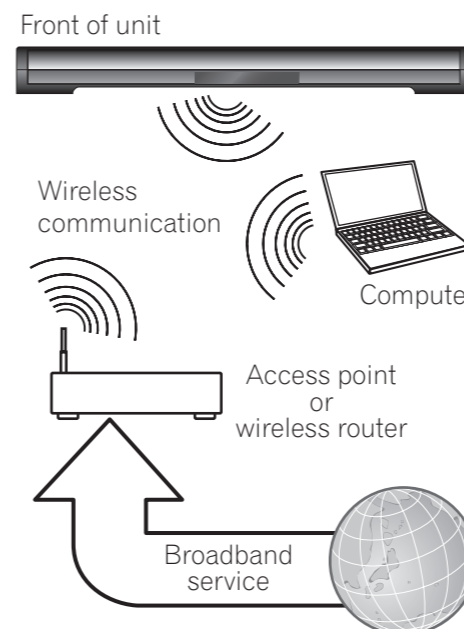


STEP 3 Connecting the power cord

Connect the power cords of the AV speaker bar and wireless subwoofer (SBX-N700 only) to an outlet.

STEP 4 Preparing the remote control

Insert the supplied batteries (AAA x2).

Insert the batteries as indicated by the \oplus \ominus marks in the battery compartment.

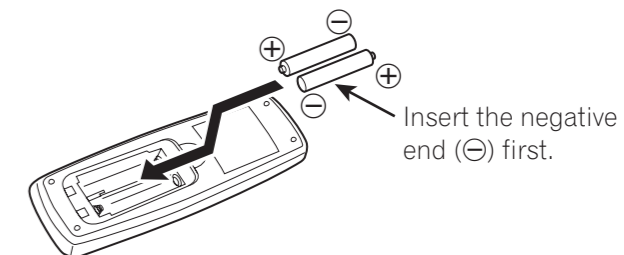


STEP 5 Pressing the [STANDBY/ON] button

Confirm that "PIONEER" is displayed on the display window of the AV bar.

SBX-N700 only

Confirm that the CONNECT indicator on the wireless subwoofer lights blue.

* If the CONNECT indicator on the wireless subwoofer does not light blue, perform pairing. For details, refer to page 52 of the Operating Instructions .

Please also read the instructions on the back side.



Basic Operations

Press **STANDBY/ON** to turn on the power and then operate the unit.
Operate the unit with the remote control.





■ Watching TV

To enable hearing of the TV audio with the unit, The TV settings may need to be set.
For details, refer to the operating instructions for your TV.

- 1 Turn on the power of the connected TV and then switch the input.**
 - For details on TV operation, refer to the operating instructions for the TV.
- 2 Press an input selection button to switch the input.**
 - For an HDMI compatible TV with support for ARC.....Press the **TV**.
 - For an HDMI compatible TV without support for ARC.....Press the **OPTICAL 1/2**.

The unit is set to connect to an ARC compatible device at the time of purchase. When connecting to a device that is not compatible with ARC, you need to set the unit settings. For details on the HDMI (ARC) settings, refer to page 27 of the Operating Instructions .
- 3 Press the VOLUME and SUBWOOFER VOL to adjust the volume.**
 - If sound is not output from the wireless subwoofer, refer to page 55 of the Operating Instructions .

■ Listening to Music

- 1 Press an input selection button to switch to the corresponding input.**
 - For a USB device Press the **USB**.
For how to connect and operate a USB device, refer to pages 26 to 30 of the Operating Instructions .
 - For a portable audio player..... Press the **PORTABLE**.
For how to connect and operate a portable audio player, refer to page 20 of the Operating Instructions .
 - For a *Bluetooth* device Press the **BT AUDIO**.
For how to connect and operate a *Bluetooth* device, refer to page 37 of the Operating Instructions .
- 2 Press the VOLUME and SUBWOOFER VOL to adjust the volume.**
 - Turn on the power of the connected device.
 - If sound is not output from the wireless subwoofer, refer to page 55 of the Operating Instructions .

■ Features (Wi-Fi Direct™/Miracast™ Function Guide)


Wi-Fi Direct/Miracast are functions for connecting your mobile devices to the unit without using a wireless router.


Displaying the video of a mobile device as is on a large screen TV (connecting with Miracast)

You can connect to your mobile device if it has the Miracast function.




- 1 Press the Wi-Fi Direct.**
 - The Wi-Fi Direct/Miracast mode screen appears.

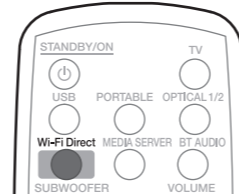








- 2 Turn on the Miracast setting on your mobile device.**
 - A list of the devices that can be connected to the mobile device is displayed on the mobile device screen.
- 3 Select the device name for the unit appearing on the TV screen from the list displayed on your mobile device.**
 - The "xx" indicates the identification character for the device.
 - If the unit's device name "DIRECT-xxSB" is not displayed on the mobile device or a connection is not possible, try performing the procedure described in "Caution" on page 34 of the Operating Instructions .
 - For details on the operation of your mobile device, refer to the operating instructions for the mobile device.

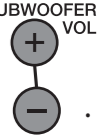

Using the Wi-Fi Direct function

- 1 Connect to the mobile device.**
 - Press the **Wi-Fi Direct** to display the Wi-Fi Direct/Miracast mode screen. Select the device name for the unit displayed on the TV screen in the Wi-Fi network settings of your mobile device, and then enter the password for the unit.
 - When establishing a WPS connection with the Wi-Fi Direct function of the mobile device, refer to page 33 of the Operating Instructions .
- 2 Play the photo, music, and video files of the mobile device.**
 - For details on the operation of your mobile device, refer to the operating instructions for the mobile device.

■ Features (Remote Control Guide)


- To increase or decrease the bass sound Adjust with .
 - To make dialog easier to hear Press .
 - When listening to sound at nighttime Press .
 - To switch the sound mode Press .
 - To set the sleep timer Press .
 - To change the brightness of the unit's display window Press .
- For details, refer to page 40 of the Operating Instructions .


■ Features (Function Guide)

- YouTube**  Press this button to enjoy YouTube. This unit comes with support for a function to play YouTube videos found in searches on a mobile device (YouTube Send to TV). The control of video searches, playing/stopping videos, etc. is performed directly from the mobile device. For details, refer to page 36 of the Operating Instructions .

SBX-N700 only

If you wish to reduce the bass sound, you can switch to the built-in subwoofer to stop sound being output from the wireless subwoofer.

You can switch the subwoofer by pressing  and then selecting [Audio Output] → [Subwoofer Setup] → [Built In].

- Input from various devices is supported including USB devices and devices on the network. For details, refer to pages 27 to 39 of the Operating Instructions .