

For detailed descriptions of the receiver, see the "Operating Instructions" provided on the included CD-ROM. See below for instructions on handling the CD-ROM.

❖ **Operating Environment** — In regard to viewing the user's manual PDF included on the CD-ROM, operation has been confirmed on the following operating environments. Microsoft® Windows® XP / Windows Vista® / Windows® 7 / Windows® 8 / Windows® 8.1 and Apple Mac OS X 10.7 or later, Adobe Reader (Version 10, 11).

❖ **Precautions For Use** — This CD-ROM is for use with a personal computer. It cannot be used with a DVD player or music CD player. Attempting to play this CD-ROM with a DVD player or music CD player can damage speakers or cause impaired hearing due to the large volume.

❖ **License** — Please agree to the "Terms of Use" indicated below before using this CD-ROM. Do not use if you are unwilling to consent to the terms of its use.

❖ **Terms of Use** — Copyright to data provided on this CD-ROM belongs to Onkyo & Pioneer Corporation. Unauthorized transfer, duplication, broadcast, public transmission, translation, sales, lending or other such matters that go beyond the scope of "personal use" or "citation" as defined by Copyright Law may be subject to punitive actions. Permission to use this CD-ROM is granted under license by Onkyo & Pioneer Corporation.

❖ **General Disclaimer** — Onkyo & Pioneer Corporation does not guarantee the operation of this CD-ROM with respect to personal computers using any of the applicable OS. In addition, Onkyo & Pioneer Corporation is not liable for any damages incurred as a result of use of this CD-ROM and is not responsible for any compensation. The names of private corporations, products and other entities described herein are the registered trademarks or trademarks of their respective firms.

* **When Using a Mac OS:** Place the CD-ROM in the CD drive, click the CD drive from Finder, and double click the Index.html (table of contents) for operation instructions.

Para conocer una descripción detallada del receptor, consulte el "Manual de instrucciones" suministrado con el CD-ROM incluido. Consulte más abajo para conocer las instrucciones de manejo del CD-ROM.

❖ **Entorno de funcionamiento** — Con respecto al manual del usuario en formato PDF incluido en el CD-ROM, se ha confirmado que puede visualizarse en los siguientes entornos operativos: Microsoft® Windows® XP / Windows Vista® / Windows® 7 / Windows® 8 / Windows® 8.1 y Apple Mac OS X 10.7 o posterior, Adobe Reader (versión 10, 11).

❖ **Precauciones para el Uso** — Este CD-ROM es para utilizarse con un PC. No se puede utilizarlo con un reproductor de DVD o reproductor de CD de música. Intentar reproducir este CD-ROM con un reproductor de DVD o reproductor de CD de música puede dañar los altavoces o perjudicar la audición debido al volumen muy alto.

❖ **Licencia** — Asegúrese de aceptar los "Términos de Uso" que se indican a continuación antes de utilizar este CD-ROM. No utilice si no está de acuerdo con los términos de uso.

❖ **Términos de Uso** — Los derechos de autor de los datos que se proveen en este CD-ROM pertenecen a Onkyo & Pioneer Corporation. La transferencia, duplicación, transmisión, divulgación pública, traducción, venta, préstamo u otros asuntos relacionados no autorizados que estén fuera del contexto del "uso personal" o "citación" como se define en la Ley de los Derechos de Autor pueden estar sujetos a acciones punitivas. Se otorga el permiso para utilizar este CD-ROM bajo licencia de Onkyo & Pioneer Corporation.

❖ **Renuncia de Responsabilidad** — Onkyo & Pioneer Corporation no garantiza el funcionamiento de este CD-ROM con respecto a cualquier PC con los sistemas operativos aplicables. Además, Onkyo & Pioneer Corporation no será responsable de cualesquiera daños ocasionados por el uso de este CD-ROM, ni tampoco será responsable de ninguna indemnización. Los nombres de compañías privadas, productos y otras entidades que se describen aquí son las marcas registradas o marcas comerciales de sus respectivos propietarios.

* **Cuando se utiliza un sistema operativo Mac:** Coloque el CD-ROM en la unidad de CD, haga clic en la unidad de CD desde el Finder, y a continuación haga doble clic en Index.html (índice) para obtener las instrucciones de funcionamiento.

CAUTION

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

D3-4-2-1-1_B1_En

WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3_A1_En

WARNING

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

D3-4-2-1-7a_A1_En

Operating Environment

Operating environment temperature and humidity:
+5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH
(cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light).


D3-4-2-1-7c*_A2_En

Voltage selector

You can find the voltage selector switch on the rear panel of multi-voltage models.

The factory setting for the voltage selector is 220-230 V. Please set it to the correct voltage for your country or region.

Before changing the voltage, disconnect the AC power cord. Use a medium size screwdriver to change the voltage selector switch.

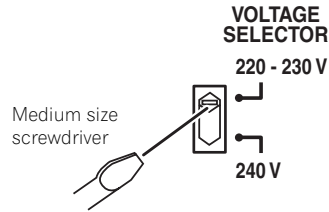

D3-4-2-1-5*_A2_En

WARNING

Store small parts out of the reach of children and infants. If accidentally swallowed, contact a doctor immediately.

D41-6-4_A1_En

CAUTION

The **STANDBY/ON** switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation).

D3-4-2-2-2a*_A1_En

This product is for general household purposes. Any failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period.

K041_A1_En

PRECAUCIÓN

PARA PREVENIR EL PELIGRO DE CHOQUE ELÉCTRICO NO REMOVER LA TAPA NI LAS PARTES DENTRO NO UTILIZADAS, LLAMAR UNA PERSONA CUALIFICADA.

D3-4-2-1-1_B2_Es

ADVERTENCIA

Este aparato no es impermeable. Para evitar el riesgo de incendio y de descargas eléctricas, no ponga ningún recipiente lleno de líquido (como pueda ser un vaso o un florero) cerca del aparato ni lo exponga a goteo, salpicaduras, lluvia o humedad.

D3-4-2-1-3_A1_Es

ADVERTENCIA

Para evitar el peligro de incendio, no ponga nada con fuego encendido (como pueda ser una vela) encima del aparato.

D3-4-2-1-7a_A1_Es

Entorno de funcionamiento

Temperatura y humedad del entorno de funcionamiento +5 °C a +35 °C; menos del 85 % de humedad relativa (rejillas de refrigeración no obstruidas)
No instale este aparato en un lugar mal ventilado, ni en lugares expuestos a alta humedad o a la luz directa del sol (o de otra luz artificial potente).


D3-4-2-1-7c*_A1_Es

Selector de tensión

El selector de tensión está situado en el panel posterior de los modelos de tensiones múltiples.

El ajuste predeterminado del selector de tensión es de 220-230 V. Ajustelo a la tensión correcta de su país o región.

Antes de cambiar la tensión, desenchufe el cable de alimentación de CA. Para cambiar el ajuste del selector de tensión, emplee un destornillador de tamaño medio.

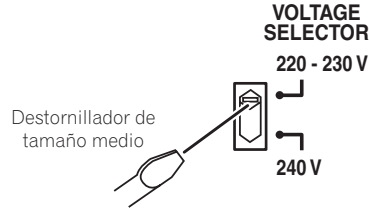

D3-4-2-1-5*_A2_Es

ADVERTENCIA

Guarde las piezas pequeñas fuera del alcance de los niños. Si las ingirieran accidentalmente, póngase de inmediato en contacto con un médico.

D41-6-4_A1_Es

PRECAUCIÓN

El interruptor de la alimentación **⏻** **STANDBY/ON** de este aparato no corta por completo toda la alimentación de la toma de corriente de CA. Puesto que el cable de alimentación hace las funciones de dispositivo de desconexión de la corriente para el aparato, para desconectar toda la alimentación del aparato deberá desenchufar el cable de la toma de corriente de CA. Por lo tanto, asegúrese de instalar el aparato de modo que el cable de alimentación pueda desenchufarse con facilidad de la toma de corriente de CA en caso de un accidente. Para evitar correr el peligro de incendio, el cable de alimentación también deberá desenchufarse de la toma de corriente de CA cuando no se tenga la intención de utilizarlo durante mucho tiempo seguido (por ejemplo, antes de irse de vacaciones).

D3-4-2-2-2a*_A1_Es

Este producto es para tareas domésticas generales. Cualquiera avería debida a otra utilización que tareas domésticas (tales como el uso a largo plazo para motivos de negocios en un restaurante o el uso en un coche o un barco) y que necesita una reparación hará que cobrarla incluso durante el período de garantía.

K041_A1_Es

© 2015 Onkyo & Pioneer Corporation.
All rights reserved.